

**How to install the conductive
& stretchy
Horseguard Bi-Polar gate kit #BP12**



10ft long



Hook the gate kit to the lugs. Check the color code (green on top)...



Go back to the other post and measure the tape. Don't over stretch it. Put a mark on the tape. The correct tension will be the width of the block.



Unhook the gate handle and drop it on the grass leaving the tape loose on the ground.




Loosen the lag screws on the tensioner, slightly open the top from the base to slide in the tail of the tape until you meet the mark.



Re-Tension the fence tape and make sure that the two tapes are in a super imposed position. Drill back in the 4 lagbolts.



Pick up the gate handle and hook it back on the lugs on the tensioner.

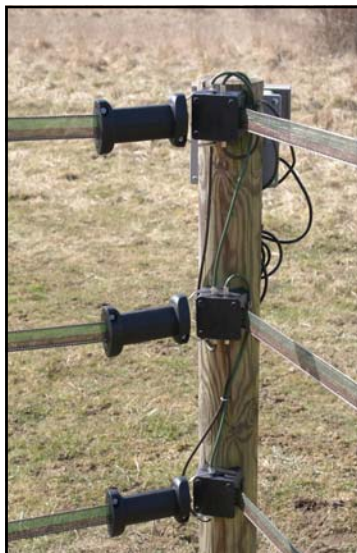

Proceed the same way for each strand



Your gate with 3 gate handle kits #BP12 is ready. It can be also two strands.

Last tip: The smaller the gate the better. Some went as short as 4ft wide...