

## The 320ft Bi-polar Starter kit contents:

- 320ft New Bi-Polar fencing tape
- 4 Tensioners #9 bl
- 29 Line black insulators #8 bl
- +1 Insulator mounted with
- 2 Stainless steel connectors + 2 HT cables  
(5ft **Brown** HT cable + Crimped lug  
(5ft **Green** HT cable + Crimped lug)
- 16 long Lag bolts + wood screws  
+ 30 Stainless steel wire-ties .
- 1 warning sign
- 1 Bag of 100 wax sealed samples  
to distribute to yours friends!
- 1 pipe key



The Starter Kit will allow you to install one strand of tape, around an 320ft perimeter, for 30 posts, 4 corners, (gate and charger not included).

*You must not cut the tape until you reach the last corner*



Position each tensioner on the corner posts. Set only the 2 bottom lagbolts to hold the tensioner in place, **leaving the top open** so the tape can be inserted.



Install the 29 insulators on the line posts with the wood screws for wooden posts or the wire ties for metal-posts.



Set the tape into the first tensioner and squeeze it in by tightening the long lagbolts using a cordless drill or the pipe key.




Position the tape onto the insulators but **do not lock it in yet** .



From one corner to the next one up to the end of the fence **pull the tape as hard as you can until** you have built sufficient tension and tighten the long lag bolts until the tape is definitely locked in.



At each line post **secure the cap** with the 2 thumb screws.

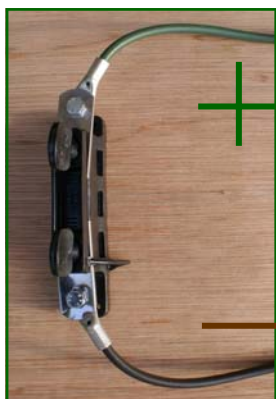

Connect the green cable to the positive terminal of the charger

Connect the brown cable to the negative terminal of the charger

Install the insulator with the 2 connectors next to where you want to place your charger.

Connect the **green cable** to the positive terminal of the charger and the **brown cable** to the negative terminal of the charger and switch the fence on!

